



➤ General Information:

Kit includes; 4-Part moulded base, connectors, poles & flag rings
Size; Extends upto max 5.3m

➤ Unit Weight:


75.2kg approx. (When filled with water)

➤ Artwork Specifications:

Maximum Banner Size; 3500 x 1000mm
Minimum Banner Size; 1700 x 1000mm

Product Name: Wind Dancer

Type: Flag Banner

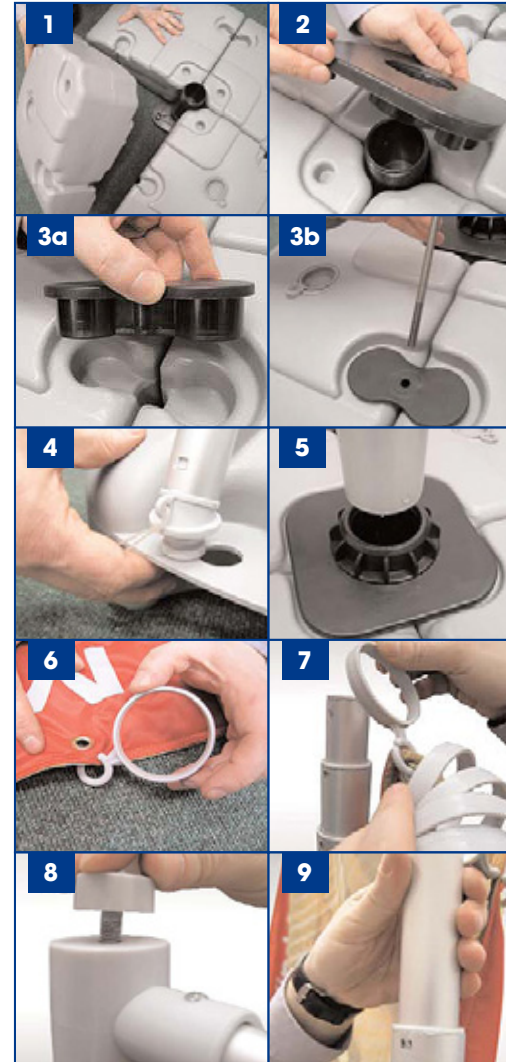

User Instructions

- 1 Assemble the 4-part base, slotting each section into the central core. Ensure that the thread of the core is facing upwards.
- 2 Place the cover plate over the central core and secure in place using the large plastic nut.
- 3 Insert the 4 connectors over the indents in the base unit (3a), thread the long locking screws through each and then insert another connector underneath (3b). Screw down to secure in place.
- 4 Insert the flag pole feet into the locating holes on the four corners of the base stand and secure in place with the hanging attachment.
- 5 Insert the assembled flag pole into the central core of the base stand. Fill up each corner of the stand with either water or sand for increased stability.
- 6 Insert the large loop hooks through the eyelets on the long edge of the flag banner and the smaller hooks on the top edge.
- 7 Thread the loop hooks over the flag pole (bottom hook first), and thread the smaller hooks through the pole header.
- 8 Place the pole header over the top of the flag pole and secure in place.
- 9 Extend the telescopic pole, ensuring that each section clicks into place.



Outdoor